

# PC

## Parts Catalog

### John Deere 6404D, 6404T, and 6404A OEM Engines and Accessories

DEALER	WEIGHT	FAC.	O.S.	T.O.	INVOICE	WHSE. LOC.
2015		DS	4	AR	350409	234C08
DEALER LOCATION	FR. CL.	DESCRIPTION	QTY.	PART NUMBER		
		400 SER	1	TM1106		
PKG. QTY.	DLR. ORD. NO.	ITEM NO.	BATCH NUMBER	SHIP-VIA		
	K5700	3	275-1614-002	APP-AU		
FROM	JD IL-IND				QUANTITY SHIPPED	
	400 19TH ST					
SHIP TO	MOLINE, IL 61265					
	CESS HILL IND PTY LTD					
	LOT 12 RUSSELL ST					
EMU PLAINS NSW 2750						
AUSTRALIA						

 
**PC-1554**



 
Engines for the Original Equipment Market

U.S.A. R (New)

6404U, 6404T, AND 6404A OEM  
ENGINES AND ACCESSORIES

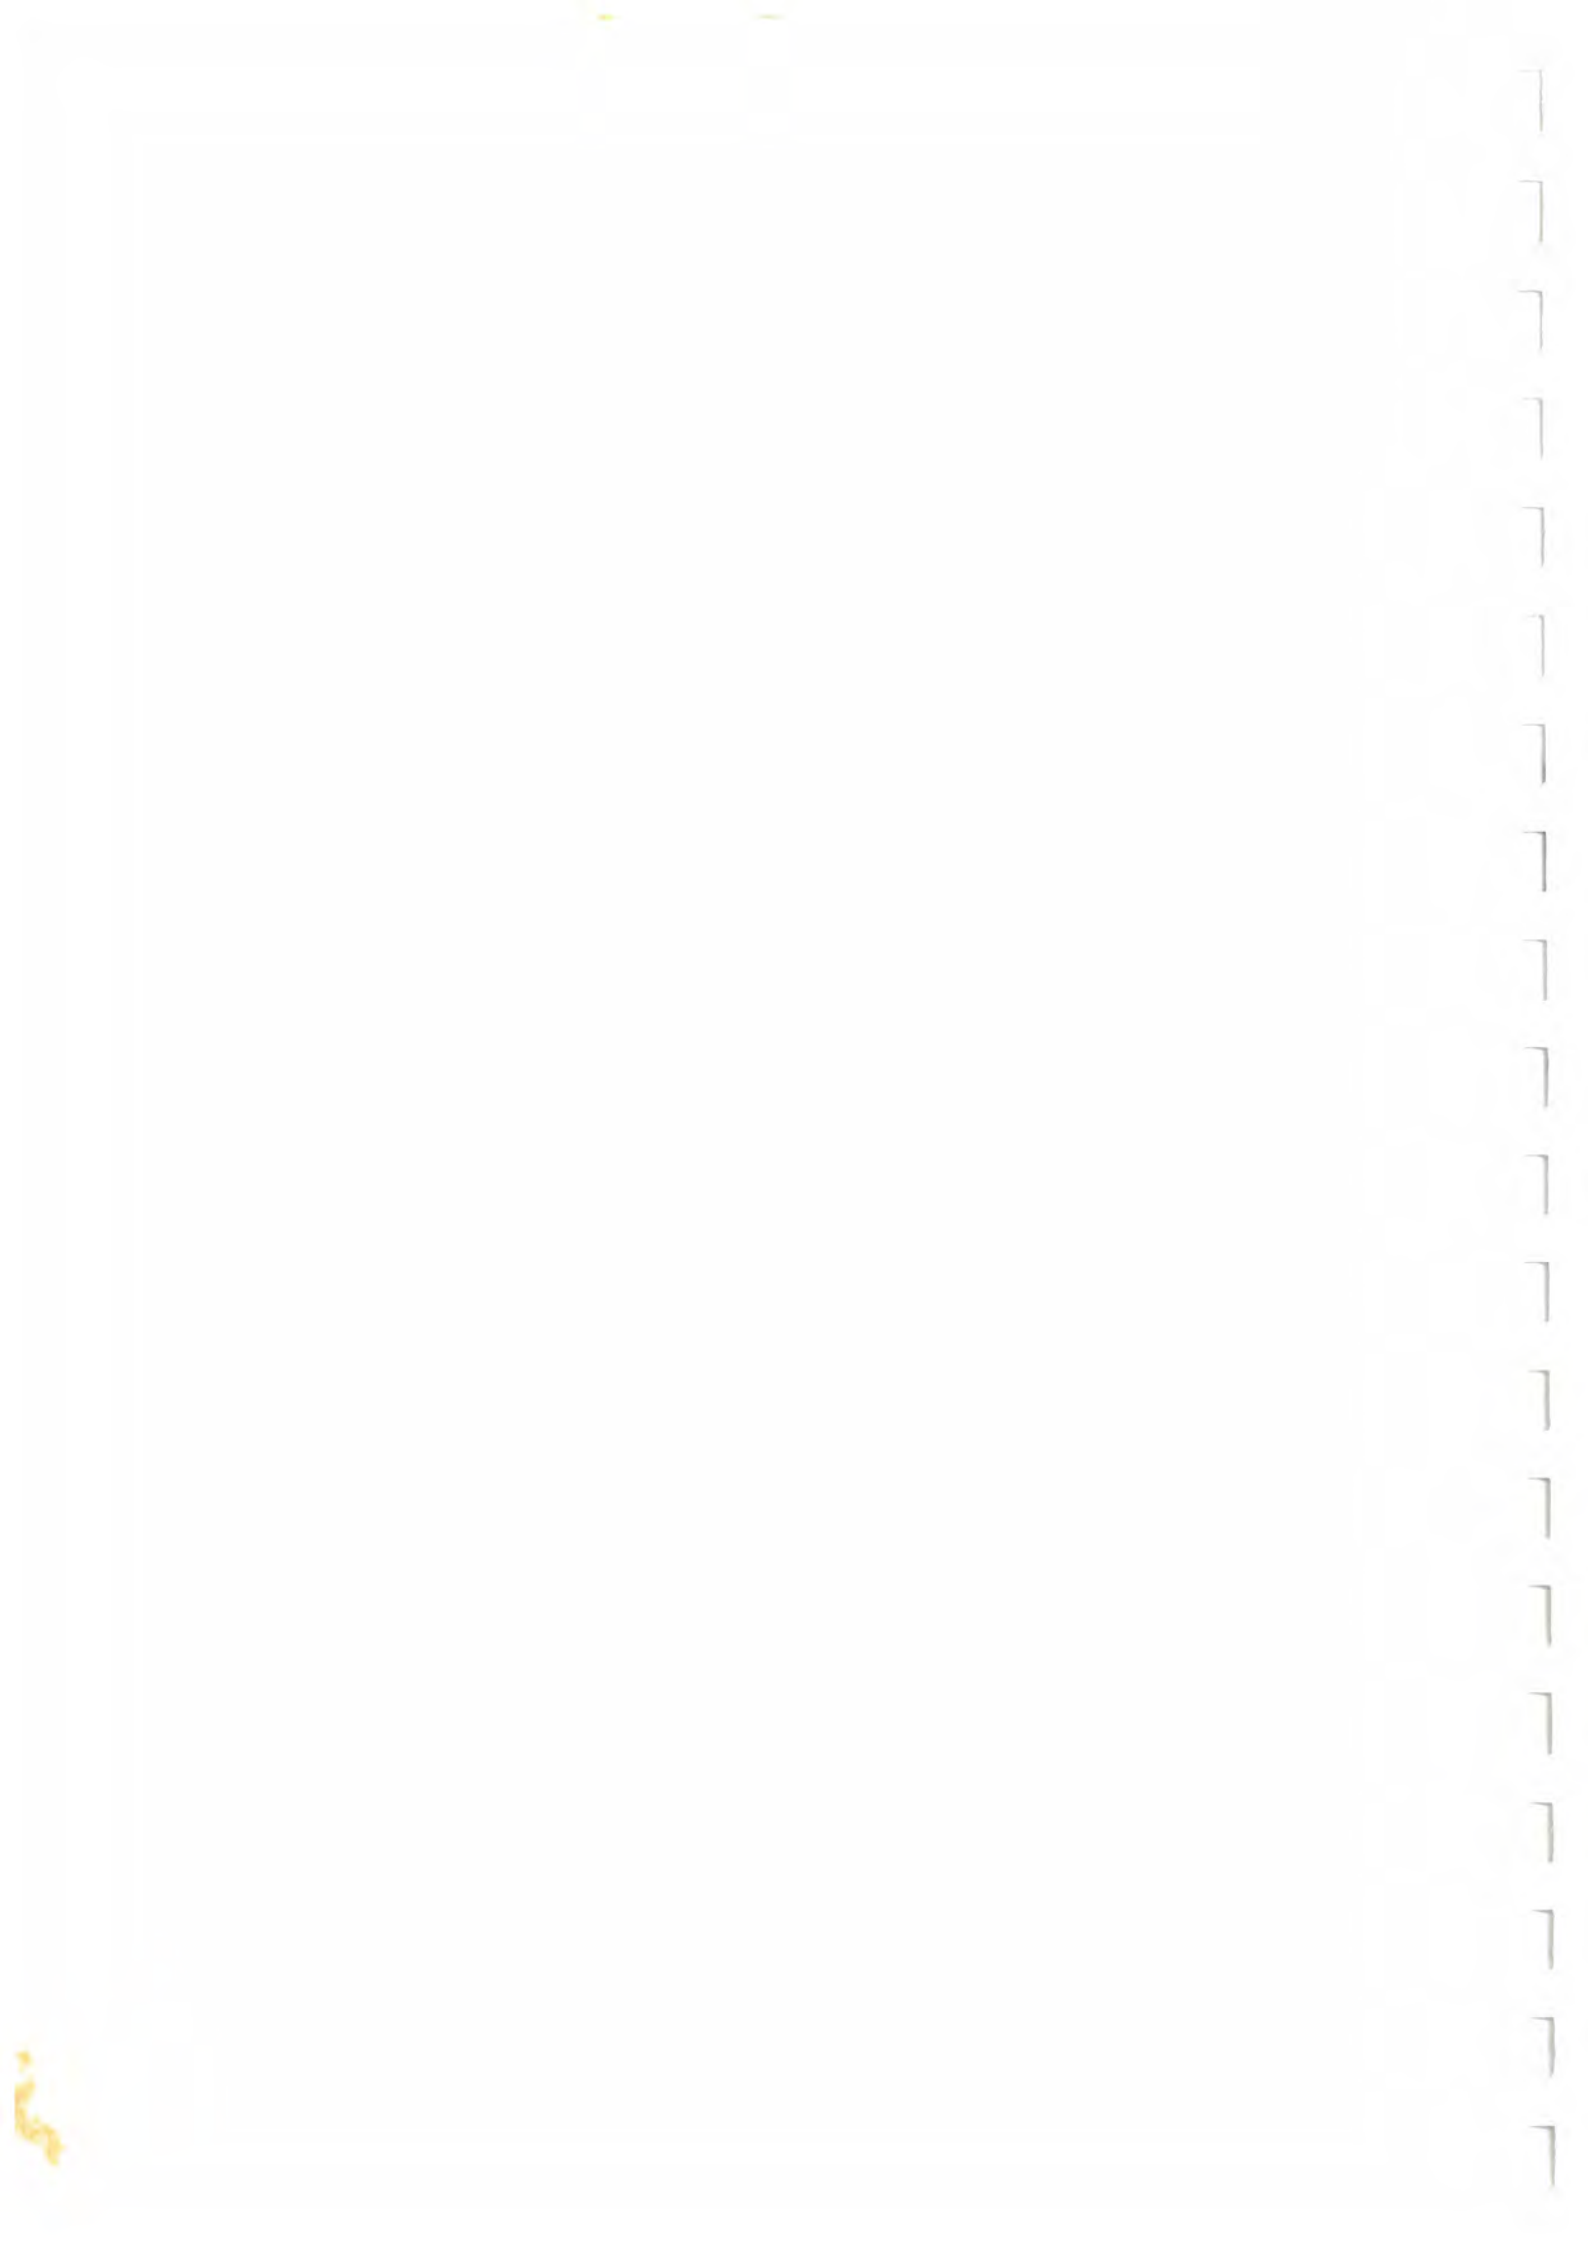



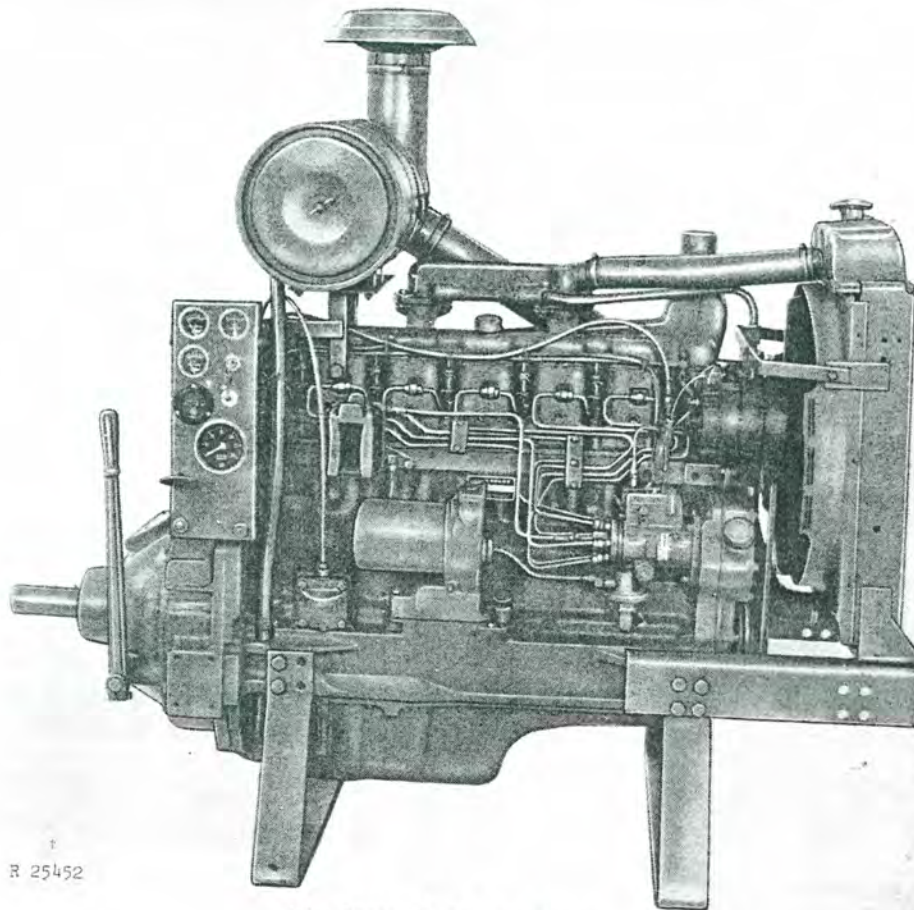


R 25452

*John Deere 6404D OEM Engine*

*Specifications and design subject to change without notice.*


## HOW TO IDENTIFY PARTS FOR OEM ENGINES

 1. Determine the engine model number from the serial number plate located on the side of the engine. (See page 5-6 for engine serial number information.)

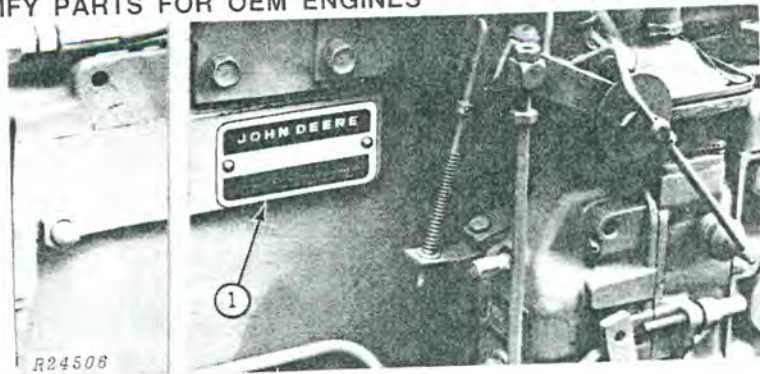

JOHN DEERE	
CONTROL BASIC ENGINE	XXXXXXXXXXXXXXXXXXXX XXXXX
OPTION CODES	
XXXX XXXX .XXXX	XXXX XXXX XXXX XXXX
XXXX XXXX XXXX	XXXX XXXX XXXX XXXX
XXXX XXXX XXXX	XXXX XXXX XXXX XXXX
XXXX XXXX XXXX	XXXX XXXX XXXX XXXX
XXXX XXXX XXXX	XXXX XXXX XXXX XXXX
XXXX XXXX XXXX	XXXX XXXX XXXX XXXX

 2. Determine the code number of the desired engine component from the code label located on the upper surface of the rocker arm cover. (See page 5-4 or 5-5 for code label information.)

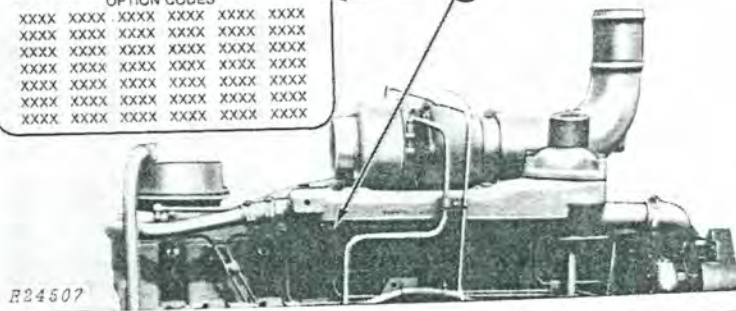

3. Determine the page location of the desired engine component by part name in the catalog Alphabetical Index.

ALPHABETICAL INDEX	
EXTENSION, MUFFLER.....	15-5
FAN.....	20-6
FAN.....	20-7
FAN BELT.....	20-7
FAN SHROUD.....	20-2
FAN SHROUD.....	20-4
FAN AND WATER PUMP.....	20-6
FIELD COIL.....	85-9
FIELD COIL.....	85-11
FILTER, ENGINE OIL.....	10-26

4. If the part number desired is known, the page location can be found by referring to the Numerical Index.

NUMERICAL INDEX			
AR	44840	20-8	9
AR	45530	10-20	3
AR	45530	10-21	9
AR	45953	10-30	18
AR	46386	25-4	26
AR	46805	20-6	9
AR	46820	85-10	.
AR	47249	10-6	1
AR	47303	15-4	5
AR	48219	25-8	19


5. Determine the correct identification of the specific component (by engine number, engine serial number and code number) in the title and sub-titles on the parts listing page.

OEM ENGINES AND ACCESSORIES - 6404D, 6404T, AND 6404A

### FAN AND WATER PUMP (6404D)



 6. Determine the exact part desired by locating it in the exploded view. Note the key number assigned to the part.

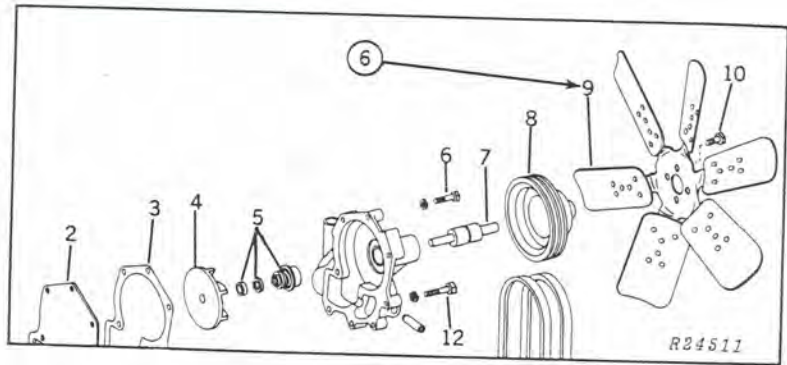

7. Determine the exact part number required by referring from the key number in the exploded view to the keyed listing below the exploded view.

KEY	PART NUMBER	ENGINE SERIAL NO.	CODE	DESCRIPTION
1	R 35263 *	-		GASKET
2	R 35261	-		COVER
3	R 35262 *	-		GASKET
4	R 40242 *	-		IMPELLER
5	AR 62934 *	-		SEAL, INSERTS AND CUP
	AR 41691	-		INSERT, IMPELLER, WITH CUP
6	19H 1906	-		SCREW, CAP, 5/16" X 1-1/2" (3 USED)
	12H 303	-		WASHER, LOCK, 5/16" (3 USED)
7	JD 9257 *	-		BEARING, BALL
8	R 40244	-		PULLEY, FAN
9	AR 46805	-	2503	FAN (6 BLADED)

### EXPLANATION OF OPTION CODES

Your engine is equipped with optional equipment. Each option is cataloged under a code number which is listed at the top of the page between the page heading and the exploded view. Parts used with all codes have no identifying codes of the part.

### OPTION GROUP PAGE REFERENCE

Code Group No.	Description	Page No.
11	Rocker Arm Cover	10-17
14	Flywheel Housing	15-14
15	Engine Flywheel	10-12
16	Fuel Injection System	25-6 - 25-53
18	Cleaner	15-10 - 15-12
24	Fan Belt	20-4, 20-5
25	Fan Blade Assembly	20-4, 20-5
27	Radiator	20-2, 20-3
30	Starting Motor	80-9 - 80-11
31	Alternator	85-4 - 85-8
32	Instrument Panel	76-6 - 85-2
33	Tachometer	75-6, 75-8
34	Hour Meter	75-6, 75-8
55	Engine Stand	15-15
58	PTO and Clutch	30-2

**ACCESSORY CODE LABEL  
(Without Turbocharger)  
(6404D)**

<b>JOHN DEERE</b>					
CONTROL :		XXXXXXXXXXXXXXXXXX			
BASIC ENGINE		XXXXX			
OPTION CODES					
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX

T35527

To assist your John Deere dealer in giving you prompt and efficient service, a code label is attached to the rocker arm cover of your John Deere engine. This code label will identify parts that are unique to the original equipment manufacturer's application by option code. The basic engine code identifies the engine model.

Basic Engine Code: 1121F

Option Codes	Description	Option Codes	Description
1101	Rocker Arm Cover, Center Filler	2803	Exhaust Manifold, Front Vertical
1102	Rocker Arm Cover, No Filler	2806	Exhaust Manifold, Front with Side Outlet
*1400	No Flywheel Housing	*3000	No Starting Motor
1403	Flywheel Housing, SAE No. 3	3004	Starting Motor
1405	Flywheel Housing, SAE No. 2	*3100	No Alternator
*1500	No Flywheel	3101	Electrical System, 37 Ampere (37A)
1501	Flywheel, Overcenter Clutch, For 10-Inch (25.4 cm)	3102	Electrical System, 55 Ampere (55A)
1505	Flywheel, Overcenter Clutch, For 11.5-Inch (29.21 cm)	3103	Electrical System, 72 Ampere (72A)
1507	Flywheel, Single Plate, for 14-Inch (35.56 cm)	*3200	No Instrument Panel
1602	Injection System, Regular Governor	3203	Instrument Panel
1603	Injection System, 3% - 5% Governor	*3300	No Tachometer
*1800	No Air Cleaner	3303	Tachometer
1801	Air Cleaner	*3400	No Hour Meter
*2400	No Fan Belts	3401	Electric Hour Meter
2401	Fan Belt	5505	Engine Stand
*2500	No Fan	5506	Engine Stand
2501	Fan, 5 Blade	5508	Engine Stand
2502	Fan, 6 Blade	*5800	No PTO
*2700	No Radiator	5801	PTO and Clutch for In-Line Loading
2701	Radiator and Fan Shroud	5802	PTO and Clutch for Side Loading

\*NOTE: Accessories not sold by John Deere will be indicated on the code label with the designation "00" as the last two digits of the option code. The original equipment manufacturer will be responsible for warranty service on this category of accessory.

**ACCESSORY CODE LABEL  
(With Turbocharger)  
(6404T)**

<b>JOHN DEERE</b>					
CONTROL:		XXXXXXXXXXXXXXXXXX			
BASIC ENGINE		XXXXX			
OPTION CODES					
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX
XXXX	XXXX	XXXX	XXXX	XXXX	XXXX

T35527

To assist your John Deere dealer in giving you prompt and efficient service, a code label is attached to your John Deere engine. This code label will identify parts that are unique to the original equipment manufacturer's application by option code. The basic engine code identifies the engine model.

Basic Engine Code: 1131F

Option Codes	Description	Option Codes	Description
	Rocker Arm Cover, Center Filler	*3100	No Alternator
	Rocker Arm Cover, No Filler	3101	Electrical System, 37 Ampere (37A)
	No Flywheel Housing		Electrical System, 55 Ampere (55A)
	Flywheel Housing, SAE No. 3	3102	Electrical System, 72 Ampere (72A)
	Flywheel Housing, SAE No. 2	3103	Electrical System, 30 Ampere (30A)
	No Flywheel	3104	No Instrument Panel
	Flywheel, Overcenter Clutch, For 10-Inch (25.4 cm)		Instrument Panel with Speed Controls
	Flywheel, Overcenter Clutch, for 11.5-Inch (29.21 cm)	*3200	Instrument Panel without Speed Controls
	Flywheel, Single Plate, for 14-Inch (35.56 cm)	3203	No Tachometer
	Injection System, Regular Governor	3205	Tachometer
	Injection System, 3% - 5% Governor		No Hour Meter
	No Air Cleaner	*3300	Electric Hour Meter
	Air Cleaner	3303	Engine Stand
	No Fan Belts	*3400	Engine Stand
	Fan Belts	3401	Engine Stand
	No Fan	5505	No PTO
	Fan	5506	PTO and Clutch for In-Line Loading
	No Radiator	5508	PTO and Clutch for Side Loading
	Radiator and Fan Shroud	*5800	
	No Starting Motor	5801	
	Starting Motor	5802	

*\*NOTE: Accessories not sold by John Deere will be indicated on the code plate with the description "00" as the last two digits of the option code. The original equipment manufacturer will be responsible for warranty service on this category of accessory.*



**ACCESSORY CODE LABEL  
(With Turbocharger)  
(6404A)**

<b>JOHN DEERE</b>	
CONTROL :	XXXXXXXXXXXXXXXXXX
BASIC ENGINE	XXXXX
OPTION CODES	
XXXX	XXXX XXXX XXXX XXXX
XXXX	XXXX XXXX XXXX XXXX
XXXX	XXXX XXXX XXXX XXXX
XXXX	XXXX XXXX XXXX XXXX
XXXX	XXXX XXXX XXXX XXXX
XXXX	XXXX XXXX XXXX XXXX
XXXX	XXXX XXXX XXXX XXXX

T35527

To assist your John Deere dealer in giving you prompt and efficient service, a code label is attached to your John Deere engine. This code label will identify parts that are unique to the original equipment manufacturer's application and option code. The basic engine code identifies the engine model.

 
Basic Engine Code: 1141F

Option Codes	Description	Option Codes	Description
1101	Rocker Arm Cover, Center Filler	*3100	No Alternator
1102	Rocker Arm Cover, No Filler	3101	Electrical System, 37 Ampere (37A)
*1400	No Flywheel Housing	3102	Electrical System, 55 Ampere (55A)
1403	Flywheel Housing, SAE No. 3	3103	Electrical System, 72 Ampere (72A)
1405	Flywheel Housing, SAE No. 2	3104	Electrical System, 30 Ampere (30A)
*1500	No Flywheel	*3200	No Instrument Panel
1501	Flywheel, Overcenter Clutch, For 10-Inch (25.4 cm)	3203	Instrument Panel with Speed Controls
1505	Flywheel, Overcenter Clutch, for 11.5-Inch (29.21 cm)	3205	Instrument Panel without Speed Controls
1507	Flywheel, Single Plate, for 14-Inch (35.56 cm)	*3300	No Tachometer
1601	Injection System, Regular Governor	3303	Tachometer
1604	Injection System, 3% - 5% Governor	*3400	No Hour Meter
*1800	No Air Cleaner	3401	Electric Hour Meter
1801	Air Cleaner	5505	Engine Stand
*2400	No Fan Belts	5506	Engine Stand
2401	Fan Belts	5508	Engine Stand
*2500	No Fan	*5800	No PTO
2503	Fan	5801	PTO and Clutch for In-Line Loading
*2700	No Radiator	5802	PTO and Clutch for Side Loading
2701	Radiator and Fan Shroud		
*3000	No Starting Motor		
3004	Starting Motor		

*\*NOTE: Accessories not sold by John Deere will be indicated on the code plate with the description "00" as the last two digits of the option code. The original equipment manufacturer will be responsible for warranty service on this category of accessory.*




## AN EXPLANATION OF ENGINE SERIAL NUMBER

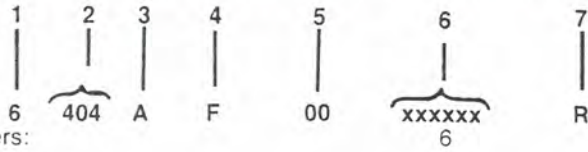


- |  |   |
|--|---|
| <ol style="list-style-type: none"> <li>1. Designates number of cylinders:</li> <li>2. Designates the cubic inch displacement:</li> <li>3. Designates the fuel:</li> <li>4. Designates the factory user:</li> <li>5. Designates the variation:</li> <li>6. Designates the consecutive serial number of the engine:</li> <li>7. Manufacturer:</li> </ol> | <p>404</p> <p>D - Diesel<br/>T - Turbocharged<br/>A - Turbocharged and intercooled<br/>F - John Deere OEM<br/>00 -None</p> <p>R - John Deere Waterloo<br/>Tractor Works</p> |
|--|---|

### 6404D

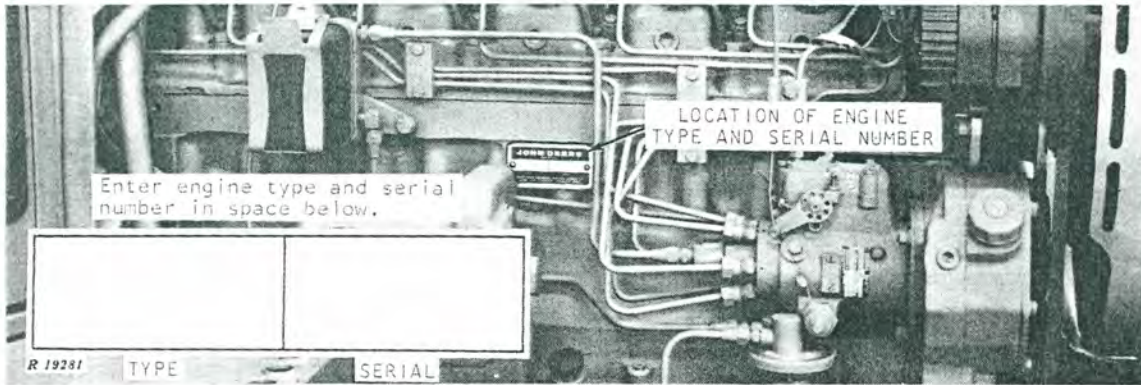 

*Engine Type and Engine Serial Number*

### 6404A and T

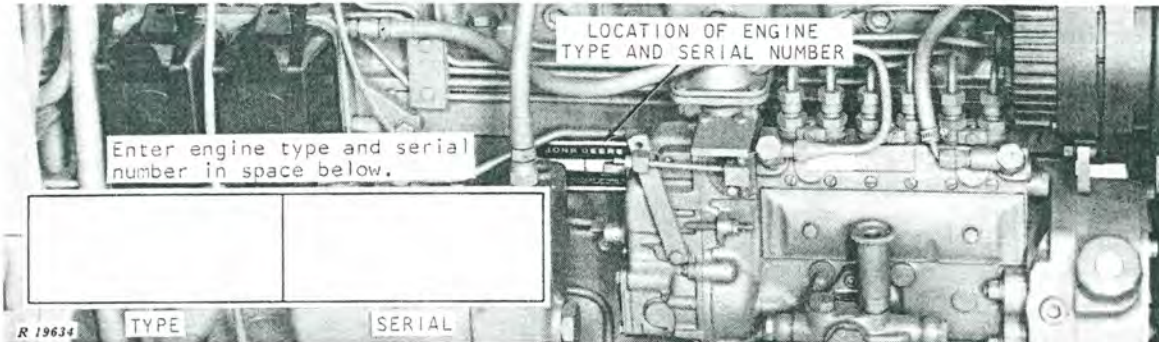 

*Engine Type and Engine Serial Number*

The engine serial number is stamped on a plate located on the right side of the engine.

## SERIAL NUMBER COLUMN

Serial number information given on any page is applicable only to parts listed and illustrated on that page.

When the parentheses include only the dash ..... ( - )  
the part is used on all engines.

When a serial number appears before the dash ..... (000000- )  
the part was introduced beginning with that serial number  
and is still being used.

When a serial number appears after the dash ..... ( -000000)  
the part was used up to and including that serial number but  
was not used after that serial number.

When serial numbers appear both before and after the dash ..... (000000-000000)  
the part was used beginning with the first serial number but  
was not used after the second serial number.

When a serial number contains XXXXXX before the dash ..... (XXXXXX- )  
the part is approved for production but the beginning serial  
number was not established when this catalog went to press.

When a serial number contains XXXXXX after the dash ..... ( -XXXXXX)  
the part is discontinued but the last serial number was not  
established when this catalog went to press.

## BOLT AND CAP SCREW STRENGTH IDENTIFICATION

Bolts and cap screws required to have high-strength qualities equivalent to SAE Grade 8 are identified throughout this catalog by the description HS SAE 8. Unless identified by this description all standard bolts and cap screws are SAE Grade 5.

## SI (International System) UNITS OF MEASURE

Metric equivalents have been included, where applicable, throughout this parts catalog.

## AN EXPLANATION OF CHANGE INDICATOR LINE

New and revised information is identified by vertical lines marked in the left-hand margin of revised pages. These lines indicate changes affecting the ordering of parts.

## SECTIONAL INDEX

GENERAL INFORMATION .....	5
ENGINE .....	10
ENGINE ACCESSORIES .....	15
COOLING SYSTEM .....	20
FUEL SYSTEM .....	25
PTO AND CLUTCH .....	30
INSTRUMENTS .....	75
ELECTRICAL SYSTEM .....	85
NUMERICAL INDEX .....	95



ALPHABETICAL INDEX

GRID		PAGE	GRID		PAGE
<b>A</b>					
C6	AIR CLEANER	15-13	B13	ENGINE OIL FILTER	10-22
C5	AIR CLEANER SUPPORTS	15-12	B12	ENGINE OIL PUMP	10-21
C7	AIR INTAKE PIPES	15-14	B22	EXHAUST MANIFOLD (6404A, T)	15-6
G15	ALTERNATOR (DELCO-REMY)	85-6	B21	EXHAUST MANIFOLD (6404D)	15-5
G17	ALTERNATOR (MOTOROLA)	85-8	<b>F</b>		
G14	ALTERNATOR (6404A, T)	85-5	C15	FAN (6404A, T)	20-5
G16	ALTERNATOR (6404A, T)	85-7	C14	FAN (6404D)	20-4
G13	ALTERNATOR (6404D)	85-4	C13	FAN SHROUD (6404A, T)	20-3
G14	ALTERNATOR MOUNTING BRACKET (6404A, T)	85-5	C12	FAN SHROUD (6404D)	20-2
G16	ALTERNATOR MOUNTING BRACKET (6404A, T)	85-7	B13	FILTER, ENGINE OIL	10-22
G13	ALTERNATOR MOUNTING BRACKET (6404D)	85-4	D1	FILTER, FUEL (6404A, T)	25-3
F11	ANEROID, INJECTION PUMP (6404A)	25-58	D2	FILTER, FUEL (6404A, T)	25-4
E21	ANEROID, INJECTION PUMP (6404T)	25-46	C22	FILTER, FUEL (6404D)	25-2
G18	ARMATURE, STARTER	85-9	A22	FLYWHEEL	10-9
G21	ARMATURE, STARTER	85-12	C9	FLYWHEEL HOUSING	15-16
D20	AUTO. ADVANCE, INJECTION PUMP (6404D)	25-24	D3	FUEL CHECK VALVE (6404A, T)	25-5
D11	AUTOMATIC ADVANCE, INJECTION PUMP(6404D)	25-14	D1	FUEL FILTER (6404A, T)	25-3
<b>B</b>					
B1	BEARING, MAIN	10-10	D2	FUEL FILTER (6404A, T)	25-4
B1	BEARING, MAIN THRUST	10-10	C22	FUEL FILTER (6404D)	25-2
A15	BLOCK, CYLINDER	10-2	F18	FUEL INJECTION NOZZLE (6404A)	25-65
G3	BRACKET, THROTTLE CABLE (6404A, T)	75-3	E12	FUEL INJECTION NOZZLE (6404A, T)	25-37
G2	BRACKET, THROTTLE CABLE (6404D)	75-2	E3	FUEL INJECTION NOZZLE (6404D)	25-28
<b>C</b>					
G3	CABLE, PUSH-PULL (6404A, T)	75-3	F6	FUEL INJECTION NOZZLE (6404T)	25-53
G2	CABLE, PUSH-PULL (6404D)	75-2	E5	FUEL INJECTION PUMP (6404A, T)	25-30
B11	CAMSHAFT	10-20	E13	FUEL INJECTION PUMP (6404A, T)	25-38
B11	CAMSHAFT GEAR	10-20	E15	FUEL INJECTION PUMP (6404A, T)	25-40
A21	CAP, OIL FILLER CAP	10-8	D4	FUEL INJECTION PUMP (6404D)	25-6
C13	CAP, RADIATOR (6404A, T)	20-3	D16	FUEL INJECTION PUMP (6404D)	25-20
C12	CAP, RADIATOR (6404D)	20-2	C21	FUEL PIPES (6404D)	25-1
C6	CLEANER, AIR	15-13	D4	FUEL PIPES (6404D)	25-6
F20	CLUTCH, PTO	30-2	C21	FUEL PUMP (6404D)	25-1
B6	CONNECTING ROD (6404A, T)	10-15	F17	FUEL TRANSFER PUMP (6404A)	25-64
B5	CONNECTING ROD (6404D)	10-14	F5	FUEL TRANSFER PUMP (6404T)	25-52
C8	COOLANT HEATER, ENGINE	15-15	<b>G</b>		
B15	COOLER, ENGINE OIL	10-24	A19	GASKET SET (6404A, T)	10-6
B8	COVER, ROCKER ARM	10-17	A18	GASKET SET (6404D)	10-5
A21	COVER, TIMING GEAR	10-8	B7	GASKET, CYLINDER HEAD	10-16
B4	CRANKSHAFT (6404A)	10-13	B11	GEAR, CAMSHAFT	10-20
B3	CRANKSHAFT (6404D, T)	10-12	B4	GEAR, CRANKSHAFT (6404A)	10-13
A15	CYLINDER BLOCK	10-2	B3	GEAR, CRANKSHAFT (6404D, T)	10-12
B7	CYLINDER HEAD	10-16	B12	GEARS, ENGINE OIL PUMP	10-21
<b>D</b>					
A15	DIPSTICK	10-2	F9	GOVERNOR, INJECTION PUMP (6404A)	25-56
D11	DRIVE SHAFT, INJECTION PUMP (6404D)	25-14	F15	GOVERNOR, INJECTION PUMP (6404A)	25-62
D20	DRIVE SHAFT, INJECTION PUMP (6404D)	25-24	E9	GOVERNOR, INJECTION PUMP (6404A, T)	25-34
<b>E</b>					
B13	ELEMENT, ENGINE OIL FILTER	10-22	D13	GOVERNOR, INJECTION PUMP (6404D)	25-16
C8	ENGINE COOLANT HEATER	15-15	E1	GOVERNOR, INJECTION PUMP (6404D)	25-26
C10	ENGINE MOUNTS	15-17	E19	GOVERNOR, INJECTION PUMP (6404T)	25-44
A14	ENGINE OIL	10-1	F3	GOVERNOR, INJECTION PUMP (6404T)	25-50
B15	ENGINE OIL COOLER	10-24	<b>H</b>		
<b>F</b>					
<b>G</b>					
<b>H</b>					
G11	HARNES, WIRING	85-2	D13	HEAD AND ROTOR, INJECTION PUMP (6404D)	25-16
D13	HEAD AND ROTOR, INJECTION PUMP (6404D)	25-16	E1	HEAD AND ROTOR, INJECTION PUMP (6404D)	25-26
E1	HEAD AND ROTOR, INJECTION PUMP (6404D)	25-26	B7	HEAD, CYLINDER	10-16
B7	HEAD, CYLINDER	10-16	C8	HEATER, ENGINE COOLANT	15-15
C8	HEATER, ENGINE COOLANT	15-15	C9	HOUSING, FLYWHEEL	15-16
C9	HOUSING, FLYWHEEL	15-16	C16	HOUSING, THERMOSTAT (6404D)	20-6
C16	HOUSING, THERMOSTAT (6404D)	20-6	C17	HOUSING, THERMOSTAT (6404D)	20-7
C17	HOUSING, THERMOSTAT (6404D)	20-7	C15	HUB, FAN (6404A, T)	20-5
C15	HUB, FAN (6404A, T)	20-5			



## ALPHABETICAL INDEX - CONTINUED

GRID		PAGE	GRID		PAGE
C14	HUB, FAN (6404D)	20-4			
I					
E4	INJECTION NOZZLE (6404D)	25-29			
F11	INJECTION PUMP ANEROID (6404A)	25-58			
E21	INJECTION PUMP ANEROID (6404T)	25-46			
D20	INJECTION PUMP AUTO. ADVANCE (6404D)	25-24			
D11	INJECTION PUMP AUTOMATIC ADVANCE (6404D)	25-14			
D11	INJECTION PUMP DRIVE SHAFT (6404D)	25-14			
D20	INJECTION PUMP DRIVE SHAFT (6404D)	25-24			
D10	INJECTION PUMP ELECTRIC SHUT-OFF	25-12			
F9	INJECTION PUMP GOVERNOR (6404A)	25-56			
F15	INJECTION PUMP GOVERNOR (6404A)	25-62			
E9	INJECTION PUMP GOVERNOR (6404A, T)	25-34			
D13	INJECTION PUMP GOVERNOR (6404D)	25-16			
E1	INJECTION PUMP GOVERNOR (6404D)	25-26			
E19	INJECTION PUMP GOVERNOR (6404T)	25-44			
F3	INJECTION PUMP GOVERNOR (6404T)	25-50			
D13	INJECTION PUMP HEAD AND ROTOR (6404D)	25-16			
E1	INJECTION PUMP HEAD AND ROTOR (6404D)	25-26			
D6	INJECTION PUMP LINKAGE (6404D)	25-8			
D8	INJECTION PUMP LINKAGE (6404D)	25-10			
D18	INJECTION PUMP LINKAGE (6404D)	25-22			
F7	INJECTION PUMP PARTS (6404A)	25-54			
F13	INJECTION PUMP PARTS (6404A)	25-60			
E7	INJECTION PUMP PARTS (6404A, T)	25-32			
E17	INJECTION PUMP PARTS (6404T)	25-42			
F1	INJECTION PUMP PARTS (6404T)	25-48			
G4	INJECTION PUMP SHUT-OFF RACK PULLER	75-4			
E11	INJECTION PUMP TRANSFER PUMP (6404A, T)	25-36			
D15	INJECTION PUMP TRANSFER PUMP (6404D)	25-18			
E2	INJECTION PUMP TRANSFER PUMP (6404D)	25-27			
D4	INJECTION PUMP, FUEL (6404D)	25-6			
F18	INJECTOR NOZZLE (6404A)	25-65			
E12	INJECTOR NOZZLE (6404A, T)	25-37			
E3	INJECTOR NOZZLE (6404D)	25-28			
F6	INJECTOR NOZZLE (6404T)	25-53			
G8	INSTRUMENT PANEL (6404A, T)	75-8			
G6	INSTRUMENT PANEL (6404D)	75-6			
G8	INSTRUMENTS (6404A, T)	75-8			
G6	INSTRUMENTS (6404D)	75-6			
B19	INTAKE MANIFOLD	15-3			
B20	INTAKE MANIFOLD (6404A)	15-4			
B17	INTAKE MANIFOLD (6404D)	15-1			
B18	INTAKE MANIFOLD (6404T)	15-2			
C7	INTAKE PIPES, AIR	15-14			
B20	INTERCOOLER (6404A)	15-4			
K					
A14	KIT, OFF-SEASON STORAGE	10-1			
G12	KIT, WIRING	85-3			
L					
C10	LIFT STRAP	15-17			
B6	LINER, PISTON (6404A, T)	10-15			
B5	LINER, PISTON (6404D)	10-14			
E15	LINES, FUEL INJECTION (6404A, T)	25-40			
D6	LINKAGE, INJECTION PUMP (6404D)	25-8			
D8	LINKAGE, INJECTION PUMP (6404D)	25-10			
D18	LINKAGE, INJECTION PUMP (6404D)	25-22			
M					
B1	MAIN BEARING	10-10			
B1	MAIN THRUST BEARING	10-10			
B22	MANIFOLD, EXHAUST (6404A, T)	15-6			
B21	MANIFOLD, EXHAUST (6404D)	15-5			
B19	MANIFOLD, INTAKE	15-3			
B20	MANIFOLD, INTAKE (6404A)	15-4			
B17	MANIFOLD, INTAKE (6404D)	15-1			
B18	MANIFOLD, INTAKE (6404T)	15-2			
C18	MANIFOLD, WATER (6404A, T)	20-8			
C16	MANIFOLD, WATER OUTLET (6404D)	20-6			
B14	METER, SPEED-HOUR	10-23			
C10	MOUNT, ENGINE	15-17			
N					
F18	NOZZLE, FUEL INJECTION (6404A)	25-65			
F6	NOZZLE, FUEL INJECTION (6404T)	25-53			
E4	NOZZLE, INJECTION (6404D)	25-29			
E12	NOZZLE, INJECTOR (6404A, T)	25-37			
E3	NOZZLE, INJECTOR (6404D)	25-28			
D16	NOZZLES, FUEL INJECTION (6404D)	25-20			
O					
B12	OIL COOLER BYPASS VALVE	10-21			
B15	OIL COOLER, ENGINE	10-24			
B13	OIL FILTER, ENGINE	10-22			
A17	OIL PAN	10-4			
B12	OIL PUMP, ENGINE	10-21			
A21	OIL SEAL, REAR	10-8			
A14	OIL, ENGINE	10-1			
C16	OUTLET MANIFOLD, WATER (6404D)	20-6			
P					
A17	PAN, OIL	10-4			
G8	PANEL, INSTRUMENT (6404A, T)	75-8			
G6	PANEL, INSTRUMENT (6404D)	75-6			
E13	PIPES, FUEL INJECTION (6404A, T)	25-38			
C7	PIPES, AIR INTAKE	15-14			
C21	PIPES, FUEL (6404D)	25-1			
D4	PIPES, FUEL (6404D)	25-6			
E5	PIPES, FUEL INJECTION (6404A, T)	25-30			
D16	PIPES, FUEL INJECTION PUMP (6404D)	25-20			
B23	PIPES, TURBOCHARGER	15-7			
B6	PISTON (6404A, T)	10-15			
B5	PISTON (6404D)	10-14			
F20	PTO	30-2			
G4	PULLER, INJECTION PUMP RACK	75-4			
G5	PULLER, RACK	75-5			
B12	PUMP, ENGINE OIL	10-21			
C21	PUMP, FUEL (6404D)	25-1			
E5	PUMP, FUEL INJECTION (6404A, T)	25-30			
E13	PUMP, FUEL INJECTION (6404A, T)	25-38			
E15	PUMP, FUEL INJECTION (6404A, T)	25-40			
D4	PUMP, FUEL INJECTION (6404D)	25-6			
D16	PUMP, FUEL INJECTION (6404D)	25-20			
F17	PUMP, FUEL TRANSFER (6404A)	25-64			
F5	PUMP, FUEL TRANSFER (6404T)	25-52			
E11	PUMP, INJECTION PUMP TRANSFER (6404A, T)	25-36			
D15	PUMP, INJECTION PUMP TRANSFER (6404D)	25-18			
E2	PUMP, INJECTION PUMP TRANSFER (6404D)	25-27			



ALPHABETICAL INDEX - CONTINUED

GRID		PAGE
C15	PUMP, WATER (6404A, T)	20-5
C14	PUMP, WATER (6404D)	20-4

R

G5	RACK PULLER	75-5
C13	RADIATOR (6404A, T)	20-3
C12	RADIATOR (6404D)	20-2
A21	REAR OIL SEAL	10-8
G11	RELAY, STARTING CIRCUIT	85-2
B6	RINGS, PISTON (6404A, T)	10-15
B5	RINGS, PISTON (6404D)	10-14
B8	ROCKER ARM COVER	10-17
B9	ROCKER ARM SHAFTS	10-18
B9	ROCKER ARMS	10-18
B6	ROD, CONNECTING (6404A, T)	10-15
B5	ROD, CONNECTING (6404D)	10-14

S

A21	SEAL, REAR OIL	10-8
D20	SHAFT, INJECTION PUMP DRIVE (6404D)	25-24
B9	SHAFT, ROCKER ARM	10-18
C13	SHROUD, FAN (6404A, T)	20-3
C12	SHROUD, FAN (6404D)	20-2
D10	SHUT-OFF, INJECTION PUMP ELECTRIC	25-12
G18	SOLENOID SWITCH	85-9
G20	SOLENOID SWITCH	85-11
G21	SOLENOID SWITCH	85-12
G23	SOLENOID SWITCH	85-14
B14	SPEED-HOUR METER DRIVE	10-23
G18	STARTER DRIVE HOUSING	85-9
G21	STARTER DRIVE HOUSING	85-12
G21	STARTER GEAR	85-12
G19	STARTER MAIN FRAME	85-10
G22	STARTER MAIN FRAME	85-13
G23	STARTER SOLENOID SWITCH	85-14
G11	STARTING CIRCUIT RELAY	85-2
C10	STRAP, LIFT	15-17
C5	SUPPORT, AIR CLEANER	15-12
G20	SWITCH, SOLENOID	85-11
G23	SWITCH, SOLENOID	85-14
G21	SWITCH, STARTER SOLENOID	85-12

T

C18	THERMOSTAT (6404A, T)	20-8
C16	THERMOSTAT (6404D)	20-6
C17	THERMOSTAT (6404D)	20-7
C16	THERMOSTAT HOUSING (6404D)	20-6
C17	THERMOSTAT HOUSING (6404D)	20-7
G3	THROTTLE CABLE (6404A, T)	75-3
G2	THROTTLE CABLE (6404D)	75-2
A21	TIMING GEAR COVER	10-8
F17	TRANSFER PUMP, INJECTION PUMP (6404A)	25-64
E11	TRANSFER PUMP, INJECTION PUMP (6404A, T)	25-36
D15	TRANSFER PUMP, INJECTION PUMP (6404D)	25-18
E2	TRANSFER PUMP, INJECTION PUMP (6404D)	25-27
F5	TRANSFER PUMP, INJECTION PUMP (6404T)	25-52
C2	TURBOCHARGER (AIRESEARCH)	15-9
C4	TURBOCHARGER (SCHWITZER)	15-11
C1	TURBOCHARGER (6404A, T)	15-8
C3	TURBOCHARGER (6404A, T)	15-10
B23	TURBOCHARGER OIL AND AIR PIPES	15-7

GRID		PAGE
	V	
D3	VALVE, FUEL CHECK (6404A, T)	25-5
B12	VALVE, OIL COOLER BYPASS	10-21
B9	VALVE, ROCKER ARM	10-18

W

C18	WATER MANIFOLD (6404A, T)	20-8
C16	WATER OUTLET MANIFOLD (6404D)	20-6
C15	WATER PUMP (6404A, T)	20-5
C14	WATER PUMP (6404D)	20-4
G11	WIRING HARNESS	85-2
G12	WIRING KIT	85-3

---

MEMORANDA